


\$10.00

# TIMEWISE 650 OPERATOR'S MANUAL

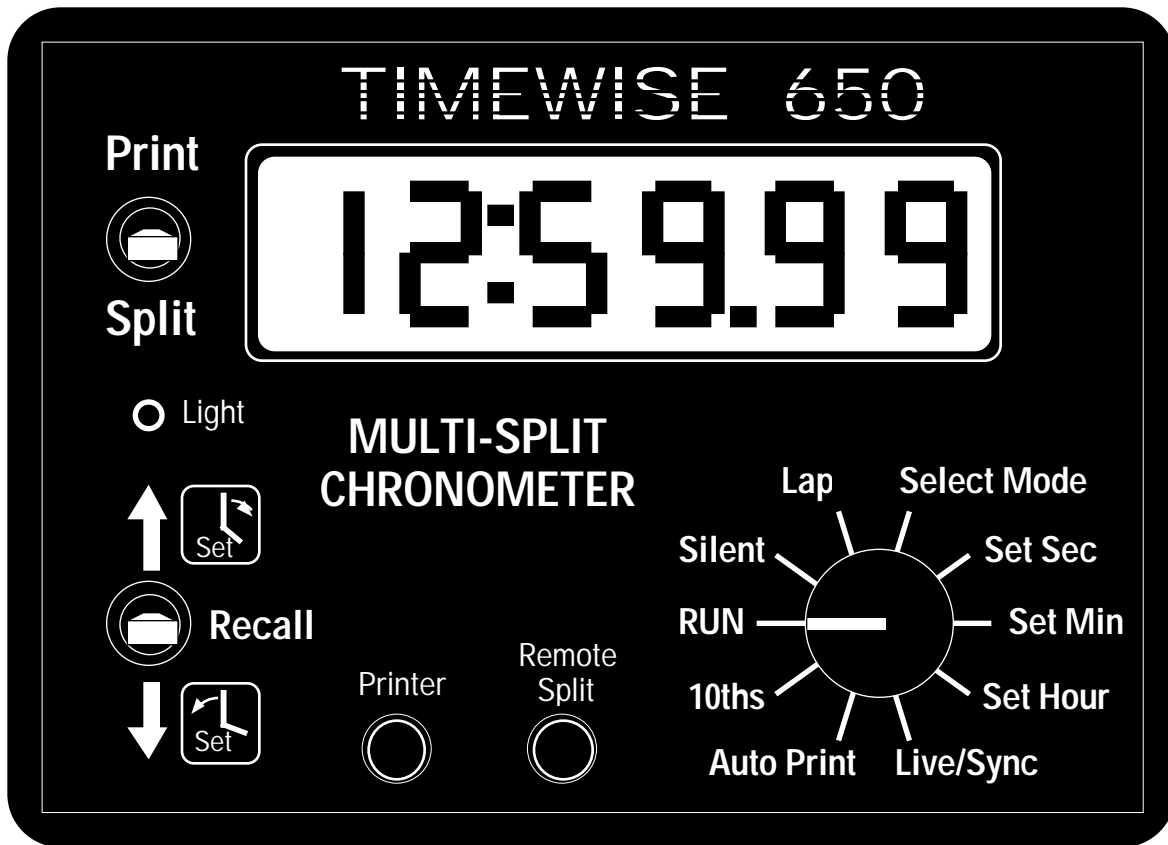

© **TIMEWISE** 32 Old Barn Road Hawthorn Woods, Illinois 60047 (847) 550-5052

Part Number 1001-650 revision 2.006

All Rights Reserved

Printed November 1, 2001

## Limitation on Warranty and Liability

Timewise warrants this equipment to be free from defects in material and workmanship for a period of two years from the date of shipment to the original purchaser. This warranty is limited to the repair and replacement of parts and the necessary labor and services required to repair the equipment. This warranty is made in lieu of all other expressed or implied warranties, whether written or oral.

Except as specified below, this warranty covers all defects in materials and workmanship. The following are not covered: Damage as a result of accident, misuse, abuse, or as a result of installation, operation, modification, or service on the equipment; damage resulting from failure to follow instructions contained in the User's Manual; damage resulting from the performance of repairs by someone not authorized by Timewise; damage caused by direct exposure to liquids, solvents, salty air, or corrosive gases; damage caused by exposure to excessive amounts of dust or dirt; damage caused by exposure to temperatures above or below the storage or operating limits of the equipment; or normal wear of the instrument enclosure, connectors, or cables.

While under warranty, Timewise will service, repair, replace, or adjust any defective part or parts free of charge, when the instrument is returned freight prepaid to Timewise. The purchaser is responsible for insuring any equipment returned, and assumes the risk of loss during shipment.

## Limitation of Implied Warranties and Exclusion of Certain Damages

All implied warranties, including warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this warranty.

In no event will Timewise be liable to the purchaser or any user for any damages, including any incidental or consequential damages, expenses, lost profits, lost savings, or other damages arising out of the use or inability to use this equipment. This exclusion includes damages that result from any defect in the firmware or manual.

## How to Obtain Repair Service

If your Timewise equipment requires service, return it to Timewise directly. Do not return it to your dealer. Include a detailed description of the problem. Timewise must be able to verify the problem in order to repair it. Please include telephone numbers at which you can be reached during the day and evening.

Equipment to be repaired must be returned freight prepaid to Timewise. All equipment must be packaged with sufficient protection against shipping damage. You are responsible for transportation charges when returning equipment to Timewise. Insuring the shipment is recommended. Warranty repairs will be returned via UPS ground freight prepaid. Non-warranty repairs will be returned via UPS ground COD (repair charges, freight, and COD collection fee), cash only, unless prior arrangements have been made. Alternate shipping methods can, or will, be used as necessary to assure a prompt and safe delivery.

Repairs on equipment beyond the effective date of warranty or when abnormal usage has occurred will be charged at applicable rates. Timewise will submit an estimate for such charges before commencing repair, if so requested.

## About this Manual and the Operating Firmware of Timewise Equipment

The layout of this manual and the operating procedures for Timewise equipment are trademarks of Timewise. No part of this manual or the operating firmware for Timewise equipment may be copied or reproduced, in whole or in part, without written consent from Timewise. The duplication, disassembly or dumping of operating firmware is expressly prohibited.

## Disclaimer

Although every effort has been made to make this User's Manual technically accurate, Timewise assumes no responsibility for any errors, omissions, inconsistencies, or misprints within this document.

## For Further Information

Please feel free to contact Timewise should you have any comments about this equipment. We encourage suggestions for product improvements. Special applications or customization of Timewise equipment to individual needs will also be entertained.

## TIMWISE

32 Old Barn Road  
Hawthorn Woods, Illinois 60047 USA  
(847) 550-5052

Users Manual 1001-650 revision 2.006

Printed November 1, 2001

---

# FIRMWARE VERSION HISTORY

---

## 650 Operating Firmware History

Version 1.000                      July 6, 2001

First unit delivered.

Version 1.001                      July 13, 2001

Corrected display of oscillator offset visible when viewing firmware version. Corrected amount applied when the oscillator was too fast.

Version 1.002                      July 18, 2001

Added ability to automatically show the most recent split when executing a remote split while **Live/Sync** is selected on the rotary switch. Also added the ability to disable the buzzer when a remote split is executed.

Version 1.003                      July 24, 2001

Added an automatic, once per ten seconds, LCD driver re-initialization. This was to make certain that the LCD display correctly “wakes up” after the 650 exits the sleep mode.

Rearranged data collection steps to eliminate the possibility that a lap split might display a value that was incorrect by 0.001 minute. (The problem could have occurred only when a split was executed within a 30 µsec window exactly 96 msec after a clock update, and only while the 650 was running in “hundredths”.)

Version 1.004                      August 2, 2001

Improved auto-synchronization time alignment to be within 3 milliseconds.

Version 1.005                      August 10, 2001

Previously, actuating the **Recall** “newer” toggle function always caused the live lap timer to be shown when the **Lap** rotary switch position was subsequently selected. This recall of live lap data occurred regardless of the rotary switch position. Now, the **Lap** rotary switch position must be selected in order for the live lap data to be recalled.

Version 1.006                      August 26, 2001

Added a selectable “restricted datalog access” mode of operation.

Version 2.006                      October 15, 2001

Changed the crystal frequency to 307.2KHz.

## **THANK YOU...**

for choosing the **Timewise 650 Multi-Split Chronometer!** Your Timewise 650 is an accurate and versatile multiple split checkpoint clock that will give years of dependable service. If you've used traditional rally checkpoint clocks, you'll really appreciate the improved quality, mistake proof operation, and simplified time setting procedures provided by the Timewise 650.

## **How to Use this Manual**

For a brief description of what the 650 does, read the **Introduction**.

The section covering the **Operation** of the 650 will teach you how to use the instrument. Clock setting procedures, the master/slave auto-setting procedure, the remote split input connection, and battery conserving techniques are described there.

Please read the **Maintenance & Troubleshooting** section. Some "do's" and "don't's" on the handling of the 650 are discussed there.

Lastly, a technical **Specification** list is provided.

---

# TABLE OF CONTENTS

---

## TABLE OF CONTENTS

- 1 WARRANTY & REPAIR**
- 2 FIRMWARE VERSION HISTORY**
- 3 THANK YOU...**
  - How to Use this Manual
- 4 TABLE OF CONTENTS**
- 5 TIMEWISE 650 FEATURES**
- 6 INTRODUCTION**
- 7 OPERATING THE TIMEWISE 650**
  - The Rotary Switch
  - Splitting the Clock
  - Executing Multiple Splits
  - The Auto Print Rotary Switch Function
  - Displaying “Tenths” Resolution
  - Temporarily Viewing the Live Clock
  - Executing a Lap Split
  - Deactivating the Buzzer
  - Putting the 650 to Sleep
  - Setting the Clock
  - Changing the Clock Counting Mode
  - Synchronizing the Clock
  - Automatic Master/Slave Synchronizing
  - Clearing the Datalog
  - Re-initializing the LCD Display
  - Identifying Recalled Split Data
  - Lighting the Display
  - Conserving the Batteries
  - The Remote Split Input
- 21 MAINTENANCE & TROUBLESHOOTING**
  - Firmware Version
  - Replacing Batteries
  - Preventing Problems
  - Overheating
  - Electrical Troubleshooting
  - Cleaning the 650
  - Oscillator Adjustment
- 24 APPENDIX A - Restricting Datalog Access**
- 25 SPECIFICATIONS**

## **TIMEWISE 650 FEATURES**

- ◆ Twelve hour time of day clock accurate to one second over 24 hours
- ◆ Fifty register memory for multiple splits
- ◆ Independent lap split timer with tenths of units resolution and simultaneous time of day split
- ◆ 0.5" tall, extended temperature, high humidity tolerant, 6 digit LCD
- ◆ LCD backlight for nighttime use
- ◆ Secure, yet simple, clock setting procedure
- ◆ Clock can be set to any hour, minute, or second/hundredth of minute
- ◆ Seconds/hundredths clock selection at any time
- ◆ Clock re-adjustments at any time
- ◆ Fractional seconds/hundredths synchronization at any time
- ◆ Master/Slave procedure for synchronizing several clocks at any time
- ◆ Goofproof design ...no on-off switch!
- ◆ Battery saving, automatic shut-down when not used for 24 hours
- ◆ Remote Split input with intelligent debounce circuitry
- ◆ Selectable audible buzzer when Split or Remote Split activated
- ◆ Selectable "restricted datalog access" mode
- ◆ Tenths of units (59:59.9 or 59.999) resolution at any time
- ◆ Optional RS-232C interface for sending data to a printer or computer
- ◆ Optional 9 volt DC input jack for continuous LCD backlighting

## INTRODUCTION

The Timewise 650 provides rallymasters, rallyists, and checkpoint workers with an accurate and easy to read digital time of day clock. The time of day is shown on a 6 digit, 0.5" tall character, extended temperature range, high humidity tolerant LCD that assures easy readability, even in direct sunlight. A quartz crystal oscillator accurately maintains the time to within one second over 24 hours.

The 650 uses a microcomputer designed for applications where ultra-low power consumption and a wide operating voltage play a significant role in product specification and selection. Large scale integrated CMOS technology keeps component count and power dissipation to a minimum, while simultaneously providing increased reliability.

Toggle switches give positive tactile feedback. Placing the switches on the left side frees the right hand to record data. A rotary switch is used to select the operating mode.

Time of day is displayed in the standard six digit format of hours, minutes, and seconds (12:59:59). Alternatively, the 650 can display hours, minutes, and hundredths of a minute (12:59.99). The 650 can also show time resolved to tenths of a second (59:59.9) or thousandths of minutes (59.999).

The clock can be set to any hour, minute, or second (hundredths of a minute). The clock can be adjusted at any time...even by fractions of a second...up or down! You can switch between counting in seconds or hundredths of minutes at any time. To prevent accidental loss of time, there is no "on-off" switch. A simple, but secure, clock setting procedure is used.

The 650 can "split" the current time as a rally car enters a checkpoint. Effectively, the clock is visually frozen, while continuing to count internally. The 650 can store up to 50 split times in memory. You can review logged split times forward or backward in time. You can recall each stored value, again, after having previously observed it.

A "lap split" timer is also provided. When viewing the lap timer, activation of the split switch displays the frozen elapsed time from the previous lap split action. The lap timer is simultaneously restarted internally. A time of day split value (separate from the regular split time of day memory log) is also linked to the lap split time, allowing notation of the time of day at which the lap split was executed.

A buzzer that signals activation of each split action can be enabled or disabled.

A remote split input is provided for use with optical or pneumatic switches that signal when a vehicle passes. The buzzer can also sound whenever a remote split input is activated.

One Timewise 650 can automatically set the time in another 650 simply by interconnecting a common stereo audio cable. This "master/slave" clock setting procedure can take place at any time. The slave will be synchronized to within three milliseconds of the master.

For nighttime use, the display can be momentarily illuminated with an internal LED light source. An optional 9 volt input for continuous lighting is available.

Finally, an optional RS-232C interface is available for sending data to a printer or computer.

## OPERATING THE TIMEWISE 650

There is no “on-off” switch for the Timewise 650. If the time is not visible in the display, actuate any of the toggle switch functions. This will bring the clock out of its battery-saving, power-down mode.

If the 650 has been used within the last 24 hours, the clock time will still be correct. In such a case, you may begin using the 650 immediately. (If the time is not correct, you may, if you wish, go to the section on “**Setting the Clock**” (page 11) and set the clock now.)

### **The Rotary Switch**

The 650 uses a rotary switch to select among the functions available in the clock. Each function will be described as necessary throughout this manual.

### WARNING!

The rotary switch has a rotational stop between the **Lap** switch position and the **Select Mode** switch position. Do not force the switch to turn past this built-in stop! You will break the switch!

The 650 is most often operated with **RUN** selected on the rotary switch.

### **Splitting the Clock**

When the **Split** toggle switch position is actuated, the time of day is visually frozen. Although it is not apparent, the 650 continues to keep track of the passage of time internally. That is, the clock does not stop...you just can't see the clock count advancing. This is called a “split”.

After you briefly push the **Recall** toggle switch “upward”, the 650 will once again display the current “live” time. It will be as if you had never entered the split mode at all. (While **Recall** is actuated, some special numbers will be visible in the display. See “**Identifying Recalled Split Data**” (page 14) for a full explanation.)

When the 650 is split, the decimal points and/or colons between the digits will blink on and off each second.

**Important note:** Generally, you may have the rotary switch in any position when a split is executed. (Most rallyists select the **RUN** position for normal operation.) There is, however, an important exception if you want to use the full multiple split functionality of the 650. See “**Executing a Lap Split**” (page 9) for more information.

Also note: The **Live/Sync** rotary switch position automatically causes the 650 to display “live” clock data, even if the clock had been split. Nonetheless, even with **Live/Sync** selected on the rotary switch, the 650 will execute a split. You must, however, turn the rotary switch away from the **Live/Sync** position to see the split data. More on this in a moment.



---

# OPERATION

---

## Executing Multiple Splits

If you execute a split, again, before recalling the live clock, the 650 will save the new split time internally in a “multi-split datalog”. Pushing the **Recall** switch “up” will retrieve the split time from the second split. Pushing the **Recall** switch “up” again will bring back the live clock.

You may execute fifty splits before the 650 memory is full. Each activation of the **Recall** switch upward will display the split times in the order they were saved, with “newer” data being recalled each time the switch is activated. After all split times have been recalled, the clock will become live again. You can hold the **Recall** switch in position to rapidly move forward in memory through the logged data.

**Note: See Appendix A for information on enabling a “Restricted Datalog Access” Mode**

If you actuate the **Recall** switch downward, “older” split memory data can once again be viewed. The logged data will be recalled in reverse order, newer to older.

You can cycle through the memory at any time. And note that you can actuate the **Split** switch at any time, regardless of which stored split data you are viewing. The new split data will always be appended to the memory as the newest split time.

When you have actuated the **Split** switch more than 50 times, the oldest split data is discarded as the newest split value is inserted into the memory. The 650 always has the 50 most recent splits in memory. (You can clear the entire datalog of all splits with a procedure described later.)

## The Auto Print Rotary Switch Function

Note that if you are viewing any one of the prior split times (that is, you’re not looking at the “live” clock), activating the **Split** switch simply stores the new value in memory. You won’t automatically see the new split time. To view that new split, you must actuate the **Recall** switch (maybe more than once) to locate the newest split data.

As a convenience, the **Auto Print** rotary switch function can be used to eliminate the extra step of executing a recall in order to view each split.

When a split is executed while **Auto Print** is selected on the rotary switch, the 650 will automatically bring to the display the new split time. The 650, in effect, simply executes the needed “recall newest” action for you.

Note that the **Recall** switch is fully functional even when **Auto Print** is selected on the rotary switch. Yet, regardless of what split time you are reviewing in the datalog when a new split is executed, the 650 will automatically show the new split time.

By the way, when the 650 is outfitted with an optional RS-232C interface, executing a split when **Auto Print** is selected on the rotary position will cause the 650 to automatically transmit the new split data to a printer or computer. The optional RS-232C interface and connector must be installed by Timewise. When the RS-232C option is installed, a special appendix is included with this manual.

## Displaying “Tenths” Resolution

Normally, the time of day is resolved to six digits: 12:59:59 when in the “seconds” mode of operation, or 12:59.99 when operating in the “hundredths of minutes” mode. (Choosing the “seconds” or “hundredths of minutes” mode of operation will be described later.)

When the “**10ths**” rotary switch position is selected, the clock is visually shifted left to reveal an extra digit of resolution. (The hours will no longer be visible.)

This allows you to record “tenths of seconds”, or “thousandths of minutes” split times. You can select the “**10ths**” rotary switch position whenever this information is needed, either before or after the clock has been split.

## Temporarily Viewing the Live Clock

The **Live/Sync** rotary switch position causes the 650 to display the live clock, even when the clock is split. If you are viewing a split value, and wish to momentarily see the live clock, simply turn the rotary switch to **Live/Sync**. When **Live/Sync** is de-selected, the previously viewed split time is once again displayed.

The 650 will execute a split even with **Live/Sync** selected on the rotary switch. However, you must eventually leave the **Live/Sync** position to see the split data. (Note that when **Live/Sync** is selected, the **Recall** toggle switch will not scan through the datalog memory.)

If you actuate a remote split (details later) while **Live/Sync** is selected on the rotary switch, the live clock itself will be temporarily replaced by the new split time that is being saved in memory. This “latest split” will remain visible as long as the remote split switch is actuated. (This is a feature used by some rallyists running stock class. They depress and hold a remote switch to split the clock. The time of day will be visibly split until they release the switch, whereby the display immediately becomes live again.)

## Executing a Lap Split

A “lap” timer is also provided in the 650. Turn the rotary switch to the **Lap** position to view the lap timer.

The lap timer can be used to measure the individual duration of consecutive events. Such would be the case when measuring the time it takes to drive successive tenth mile sections on a course, or consecutive laps on a race track. (By the way, a lap split is often called a “Taylor split” in reference to Frederick Winslow Taylor who pioneered work-time studies at the turn of the twentieth century.)

The lap timer counts from 00:00.0 to 59:59.9 (minutes:seconds.tenths) when operating in “seconds”, or 00.000 to 59.999 (minutes:thousandths of minutes) when operating in “hundredths of minutes”.

When viewing the lap timer, actuation of the split switch causes the 650 to display the frozen elapsed time since the previous lap split action. The 650 then automatically resets the lap timer internally. When you execute another lap split, you will be presented with a new elapsed time.

---

# OPERATION

---

The lap split timer is independent of the clock. When you execute a lap split, the 650 does not store a split time of day in the normal memory datalog. Nonetheless, a split time of day value is saved for display purposes only. This data is visible when the **Print** toggle switch is actuated while **Lap** is selected on the rotary switch.

(Should a control worker mistakenly have the **Lap** position selected when a vehicle enters a checkpoint, the linked time of day split for the lap split can be used as the arrival time.)

After executing a lap split, you may turn the rotary switch away from the **Lap** position, and back again. The latest lap split value will once again be displayed. The split time of day for the lap split (visible when the **Print** toggle switch is selected) can also be reviewed again.

Only one lap split time (and the associated time of day for the lap split) is stored in the 650. Upon each lap split execution, the 650 automatically shows the new lap split time...the previous lap split data is discarded.

You can look at the “live” lap timer (for the current lap) by pushing the **Recall** toggle switch up when **Lap** is selected. Pulling the **Recall** toggle switch down retrieves the last lap split time. (When **Lap** is selected, the **Recall** toggle switch does not scan through the normal datalog memory.)

## Deactivating the Buzzer

Normally, whenever a split is actuated (via the front panel **Split** switch or the **Remote Split** input), a buzzer will briefly sound.

If the buzzer is not desired, select the **Silent** position on the rotary switch. When a front panel split is executed with **Silent** selected, the 650 enters a silent mode of operation. The buzzer will no longer sound, regardless of which rotary switch position is selected...until you split (via the front panel **Split** switch) the 650 with the **RUN** position selected. At that time, the buzzer will sound again in all rotary switch positions. If you once again execute a split with the rotary switch turned to the **Silent** position, the 650 will again be silent.

## Putting the 650 to Sleep

The 650 will automatically turn off its display if no toggle switch is actuated for eight hours. After the display blanks, actuate any toggle to once again see the clock. The time will be correct and the datalog will be intact. However, if no toggle switch is used for 24 hours, the 650 shuts down completely. All logged data will then be lost and the time of day will have to be set again.

You can speed up the complete shut down of the 650, if you wish. To do so, first bring to the display the “live” clock. Then turn the rotary switch to the **Silent** position. Lastly, select **Print**. The 650 will immediately blank the display. When the display is turned off in this manner, the clock will continue to run internally for only six more hours before completely shutting down. Activating any toggle switch before six hours pass will turn the display on. The normal 24 hour shut down wait period is then restarted.

## Setting the Clock

Setting the clock in the 650 is simple and direct. The procedure is, nonetheless, nearly impossible to execute accidentally, thus reducing the possibility that a control worker inadvertently alters the time of day.

Notice the clock “set” icons next to the **Recall** switch. These icons signify that, when setting the clock, the **Recall** switch will adjust the clock’s digits forward or backward: pushing the **Recall** toggle upward advances the clock; pulling the toggle actuator down causes the clock to go backward.

To set the clock in the 650, start by turning the rotary switch to **RUN**. Then, at a noted time of day, actuate and hold the **Split** switch. While holding the **Split** toggle actuator down, turn the rotary switch to one of the clock setting positions: **Set Sec**, **Set Min**, or **Set Hour**. Then release the **Split** switch.

(The **Select Mode** and **Live/Sync** rotary switch positions are also clock setting positions. But for now, don’t select them.)

Now, using the **Recall** switch, adjust the clock to the time of day at which you initially depressed the **Split** switch. Select among the **Set Sec**, **Set Min**, and **Set Hour** positions as needed. If you hold the **Recall** actuator in the up or down position, the selected unit will be continuously adjusted.

After setting the clock, turn the rotary switch to **RUN** (or at least as far as the **Auto Print** position) to exit the clock setting mode.

To restate, here’s the step by step method for setting the clock:

1. Turn the rotary switch to **RUN**.
2. Noting the time of day, actuate (and hold) **Split**.
3. Turn the rotary switch to **Set Sec**, **Set Min**, or **Set Hour**.
4. Release the **Split** switch.
5. Use the **Recall** switch to set the clock to the time noted in step 2. Select among **Set Sec**, **Set Min**, and **Set Hour** positions as required.
6. When finished, return the rotary switch to **RUN**.

The current time of day will now be displayed. If your reaction time was slow when you initially depressed the **Split** switch, the clock may be off by a count. If so, re-enter the clock set mode and correct the clock as needed.

(As a convenience, when setting the clock, the up and down positions of the **Split/Print** switch may also be used to set the clock. Normal functionality of the **Split/Print** switch is disabled while the clock setting mode is active.)

You may take as much time as needed while setting the clock. This is because the 650 adjusts the internal live clock by the same amount that you adjust the displayed split value. Upon exiting the clock set mode, the live clock will have been adjusted by the correct amount, regardless of how long you spent executing the procedure.

**IMPORTANT!** Setting the time of day clears all logged data in the 650 memory.

---

# OPERATION

---

## Changing the Clock Counting Mode

The clock may be run in either “seconds” (11:59:59); or “hundredths of minutes” (11:59.99). Notice the decimal point instead of a colon after the minutes when operating in the “hundredths of minutes” mode.

To change between “seconds” and “hundredths”, enter the clock setting mode as described previously, this time choosing **Select Mode** on the rotary switch. (That is, select **RUN**, actuate (and hold) **Split**, turn the rotary switch to **Select Mode**, then release **Split**. If you were already in the clock setting mode, simply turn the rotary switch to **Select Mode**.)

Now actuate the **Recall** switch (up or down). Each time you do so, the 650 will toggle between the two counting modes. You may change modes at any time. (You can also use the **Split/Print** switch to change modes.)

After changing the clock counting mode, turn the rotary switch to **RUN** (or at least as far as the **Auto Print** position) to return to normal operation.

One benefit of being able to change the counting mode of the clock is evident when setting the clock at the beginning of the rally. You can use the “seconds” mode while aligning to WWV or another broadcasted time standard, and then switch to “hundredths” to run the rally.

**Note:** You can alternate between counting modes without clearing the log memory. This is possible if you enter the clock setting mode, only change counting modes, and then leave the clock setting mode. You may, therefore, collect several split times while in “seconds” and read them back in “hundredths” providing you don’t actually change the time of day.

## Synchronizing the Clock

Setting the clock does not alter the beat of the clock. That is, the “ticking” pulse of the clock is not changed. If the clock is “out of sync” with the official time standard, you should synchronize the 650 to the time standard.

To do so, activate the clock setting mode as before, this time selecting the **Live/Sync** rotary position. When you select this clock setting function, the clock will be live again. Now use the **Recall** switch (or **Split/Print** switch) to make the clock run slightly fast (move the toggle actuator handle up), or slow (move the toggle handle down). Repeat as necessary until the clock is synchronized to the time standard. (If you hold the actuator in position, the clock will be adjusted continuously.)

After you are satisfied that the clock is synchronized to the time standard, double check the “seconds” digit of the clock against the time standard. While synchronizing, you may have sped the clock up or slowed it down by a full count. Should you need to correct the “seconds”, turn the rotary switch to the **Set Hour** clock setting position. At the moment you de-select the **Live/Sync** position, the clock will be split again (at the time that was being displayed as you de-selected **Live/Sync**). If necessary, correct the seconds after turning the rotary switch to the **Set Sec** position.

After synchronizing the clock, turn the rotary switch to **RUN** (or at least as far as the **Auto Print** position) to return to normal operation.

## Automatic Master/Slave Synchronizing

A Timewise 650 can automatically set the time in another 650 using a master/slave communication protocol built into the instruments. That is, a 650 previously aligned to the official time, can insert that time into another 650. The automatic synchronizing procedure takes about two seconds and may be performed at any time.

To execute the synchronizing procedure, you will need a synchronizing cable to interconnect two 650's. A standard stereo audio cable is used for this purpose. Such a cable is readily available from Radio Shack as part number 42-2387. This 6-foot stereo audio cable (two wire plus shield) has the required 1/8<sup>th</sup> inch stereo miniature phone plugs at each end. (You may, of course, fashion your own synchronizing cable using 1/8<sup>th</sup> inch stereo plugs and three wire cable. To do so, just connect the three contacts of the plugs straight through. Keep the cable shorter than 7 ft.)

To synchronize two 650s, turn the rotary switch on the master 650 (the unit with the official time) to **RUN**, and the rotary switch on the slave to **Live/Sync**. Then plug the synchronizing cable into each unit's **Remote Split** input jack. Finally, actuate **Recall** (up or down) on the slave. The display on the slave will go blank after a moment. When the display comes back on, the slave 650 will be set to the exact time as the master 650. The counting mode of the master ("seconds" or "hundredths of minutes") will also be set in the slave.

You'll note that as you insert the synchronizing cable into each unit's **Remote Split** input, the contacts in the socket may temporarily short together, causing either or both 650 to split. This will not interfere with the synchronizing procedure. You can, if you wish, "unsplit" the master before synchronizing. Removing the cable also usually splits the clocks.

Take care not to shuffle the master and slave. You don't want to set the time in the master to that of the slave!

This automatic clock synchronization procedure also works in conjunction with the earlier Timewise 610 Multi-Split Checkpoint Clock. Either the 610 or the 650 may be a master or slave. The 650 can also be the master source of time for Timewise 547B and 798A rally computers.

## Clearing the Datalog

As mentioned, the datalog memory is cleared of all split times whenever the clock is set. This is done so that there is never a question as to the validity of the split times in the memory.

The datalog memory can also be cleared without setting the clock. To do so, simultaneously select both the **Print** toggle position and the **Recall** toggle switch "down" position. All logged data will be discarded.

## Re-initializing the LCD Display

When you clear the datalog, the LCD display driver is also re-initialized. If the LCD display does not work correctly when the 650 exits the sleep mode, clearing the datalog will fix the display.

---

## OPERATION


---

### Identifying Recalled Split Data

When the **Print** toggle is actuated, the display will show two numbers. Use these numbers to help ascertain the order of the data in the 650's memory.

The number on the left indicates the number of split actions that the currently viewed data is removed from (or "away from") the live clock. It tells you, in a sense, how many "splits ago" the data was collected. Use this number to find the split time "for the car that arrived at the checkpoint three splits ago." The "splits ago" number can range from 0 to 50. (Remember: The 650 can hold a maximum of 50 splits in memory.)


The number on the right is the sequence number of the split [since the log was cleared]. Read the value as an ordinal number (e.g., first, second, third, etc.). Use this value to identify, for example, "the split time for the fifteenth car that entered the control." The sequence number ranges from 1 to 999.

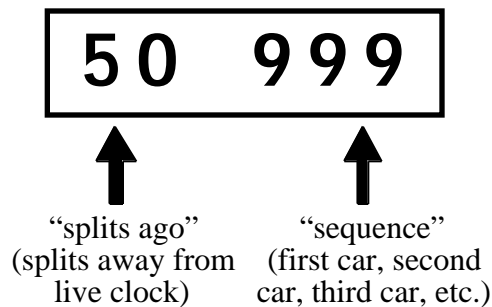

The "splits ago" and "sequence" numbers will be continuously shown while **Print** is actuated. The numbers are also briefly shown whenever the **Recall** toggle switch is actuated. If you hold the **Recall** switch in place, the 650 cycles through the datalog memory, incrementing and decrementing the "splits ago" and "sequence" numbers appropriately.


Here are some examples that help explain the meaning of these numbers.

Let's assume that the 650 is showing the live clock, and that the datalog memory has been cleared of all split times. The following information will be shown when **Print** is selected. (If you want to follow along with your 650, start by clearing the datalog as previously described.)

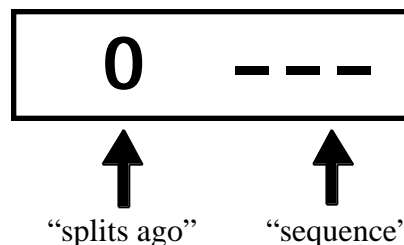


The clock is live, so the "splits ago" number is "0". The "sequence" number is blank because you are not looking at split data.

Execute a split, simulating the arrival of the first vehicle. Then select **Print**. The display will show:

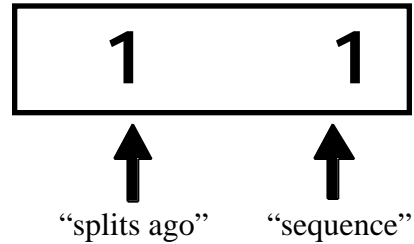

The “splits ago” value is now “1” because that is how far the data is removed from the live clock. The sequence is also “1” because the data is for the first car.

Now split again (before recalling the live clock), simulating the arrival of the second car. Actuate the **Print** toggle function and you will see:

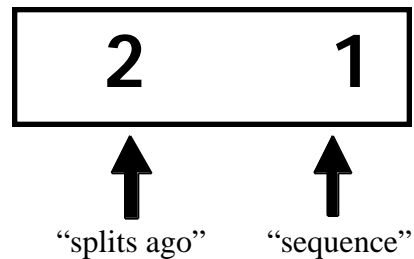

The “splits ago” count has increased to “2”. The displayed split data is unchanged, but it was collected “two splits ago”. The sequence number remains at “1” because the split data is still the log entry sequence number for the first car.

Read the display as, “The data was collected two splits ago, and it was for the first car.”

After ten more splits (assuming you haven’t activated the **Recall** switch — this checkpoint is busy!), the display will show (when **Print** is actuated):



The “splits ago” is now “12”. The data being viewed (for the first car) is now twelve splits removed from the live clock. The split sequence remains at “1” because that is still (and will forever remain) the log sequence number for the first car.

Read the display as, “The data was collected twelve splits ago, and it was for the first car.”



---

## OPERATION

---

Let's assume you now have time to recall the split data from the other vehicles. Actuate the **Recall** toggle switch "up" once, select **Print**, and you'll see:

11	2
----	---

Read the display as, "The data was collected eleven splits ago, and it was for the second car."

You are looking at the split executed upon arrival of the second car, and that split occurred eleven splits ago.

(As you probably observed, the "splits ago" and "sequence" numbers were momentarily displayed, for about a half second, when you actuated **Recall**.)

Now proceed to recall the data from subsequent vehicles. When you reach the data for the most recent vehicle, actuate **Print** to show:

1	12
---	----

The "splits ago" is now "1". The data was collected one split ago, and it was for the twelfth car.

(Note that whenever the "splits ago" is a "1", you are viewing data for the last car that entered the checkpoint. You will be only one split removed from the live clock.)

Now assume another car arrives before you recall the live clock. You execute a split, then actuate **Print**. The display shows:

2	12
---	----

The "splits ago" count has become a "2", because a new split time was entered into the datalog. You are, however, still looking at the data for the twelfth vehicle. The split "sequence" remains at "12"

Thus, the currently viewed data was collected two splits ago, and it was for the twelfth car.

Push **Recall** up once to recall the split time for the thirteenth car. Selecting **Print** will show:

1	13
---	----

You are once again one split removed from the live clock. The data is now from the thirteenth car.

Actuate **Recall** up one more time, select **Print**, and the display shows:

0	---
---	-----

The “splits ago” is “0” once again because you’re looking at the live clock. The split sequence is blank because you are not looking at split data.

At this point, the rallymaster arrives and wants to see the arrival time for the second most recent vehicle. Actuate **Recall** down twice, and you will see the split time for the vehicle that arrived two splits ago. When **Print** is selected, the display shows:

2	12
---	----

The viewed data was collected two splits ago, and it was for the twelfth car.

If you repeatedly actuate **Recall** down (or just hold the switch down) the “splits ago” and “sequence” will increment and decrement, respectively, until you reach the data for the first car that entered the checkpoint:

13	1
----	---

The “split ago” count is “13”. You are looking at data that was collected thirteen splits ago, and it was for the first vehicle.

Push **Recall** up as needed to return to the live clock:

0	---
---	-----

---

## OPERATION

---

As time goes on, more vehicles arrive at the checkpoint. As each vehicle crosses the in-line, you note each split time and immediately recall the live clock. If you actuate **Print** after each recall, the display will show the “live clock info” every time:

0	---
---	-----

When the 73<sup>rd</sup> car enters the control, you split as before, but actuate **Print** before recalling the live clock. The display will show:

1	73
---	----

You are looking at data collected one split ago, and it was for the seventy-third car that entered the checkpoint.

Now, remember that the 650 retains in its memory the data for the 50 most recent splits.

Consequently, if you repeatedly actuate the **Recall** toggle switch “down”, to review older and older data, you will eventually reach the oldest split data in memory – the data from 50 splits ago. At this point, the **Recall** down action has no older data to recall. Selecting **Print** will show the following:

50	24
----	----

The split data you are viewing (the oldest data in memory) was collected fifty splits ago, and it was for the twenty-fourth car.

You can no longer recall older split data — i.e., data from the first through the twenty-third vehicles — as that data has been purged from memory. The 650 retains data only as far back as 50 splits ago.

Should the checkpoint now close, the split data from the twenty-fourth through the seventy-third vehicles (the last 50 vehicles that entered the checkpoint) will be retained in memory.

## Lighting the Display

The LCD display on the 650 may be illuminated with a soft, yellow-green “backlight” by depressing the small pushbutton located between the toggle switches. The LCD lighting is only visible in low ambient light conditions. The light remains on as long as you depress the pushbutton.

As an option, the 650 can be outfitted with hardware that allows continuous LCD backlighting. The option requires an external 9 volt DC power source to power the light. When the option is present, there will be an input power receptacle accessible on the right side of the 650. The receptacle mates to a “coaxial DC power plug”. The input receptacle requires a plug that is 5.0mm diameter on the outside, and has a 2.1mm diameter hole.

A suitable 9 volt DC power source is available from Radio Shack. Their part number 270-1562 is a DC voltage converter that plugs into a cigarette lighter. This power converter comes with a selection of coaxial plugs, one of which fits the receptacle on the side of the 650. Install the plug so that the center contact (i.e., the tip) is the “+” polarity of the voltage.

**WARNING! DO NOT use the 12 volt output setting on the voltage converter.** The voltage provided in that setting is not a regulated 12 volts. Instead, the converter simply passes the unregulated vehicle voltage to the output. Since the vehicle’s alternator circuitry produces about 13.8 volts while charging the battery, the converter will output 13.8 volts when the car is running. Note, too, that a fully charged battery will initially provide about 13.2 volts. **Damage to the 650 will occur when more than 12 volts is continuously applied to the backlighting circuitry.**

## Conserving the Batteries

As mentioned earlier, the 650 will automatically turn off its display if no toggle switch is used for eight hours. After the display blanks, actuate any toggle to make the clock visible once again. The time will be correct.

If no toggle switch is used for 24 hours, the 650 shuts down completely.

You can hasten the complete shut down of the 650, if you wish. To do so, select the **Silent** rotary switch position, make the clock live, and then actuate **Print**. The 650 will immediately blank the display. When the display is turned off in this manner, the clock will run for only six more hours before completely shutting down. Activating **Print**, again, (or any other toggle position) before the six hours pass will turn the back display on. The normal 24 hour shut down wait period is then restarted.

**NOTE:** By leaving the rotary switch in the **Silent** position, the 650 consumes less energy (about 15  $\mu$ amps less current) while it is shut down. This can extend battery life an additional 2 months during storage.

**NOTE:** Also, note that for every five seconds the LCD backlighting pushbutton is depressed, the batteries are drained the equivalent of one hour or more of normal operation. If you use the backlighting a lot, the batteries will have to be replaced more often. If you cannot see the LCD backlighting in the dark, it is time to replace the batteries. (The 650 will run about 10 days on batteries that can no longer power the LCD backlighting.)



---

# OPERATION

---

## The Remote Split Input

The **Remote Split** input provides a means of splitting the 650 via an external switch closure. The remote split connector accepts an 1/8<sup>th</sup> inch miniature stereo phone plug. Contact assignments for the connector are:

Shaft— Ground; connected to the negative side of the 6 volt supply.

Ring — Remote split input; held high (to 5.3 volts) with a 3K pull-up resistor and connected to a CMOS input via a 1K series resistor. The input must be brought to 0.5 volt or less for a remote split to be sensed and returned to 5 volts to reset the sensing circuitry. After receiving a remote split, the 650 waits at least 0.6 second before another split can be sensed.

Tip — Clock synchronization data in/out; held high (to 5.0 volts) with a 100K pull-up resistor and connected to a CMOS gate via a 1K series resistor. Synchronization data is transmitted once every two seconds when **RUN** is selected on the rotary switch; data is accepted when **Recall** is actuated while **Live/Sync** is selected on the rotary switch.

### Do not apply any voltage to any of the contacts!

To activate the **Remote Split** function, all you need to do is make an electrical connection between the ring and shaft contacts of the input connector. Here's what you need to build an appropriate plug/cable/switch assembly. Radio Shack is a good source for all these items:

1. Miniature stereo phone plug (three contact; 1/8<sup>th</sup> inch diameter)
2. Two conductor cable (shielded cable is fine, but not required)
3. A single pole, normally open switch.
4. The correct tools and materials for cutting, stripping, and soldering wires to the switch and plug.

The cable assembly is easy to make: At one end of the cable, solder one conductor each to the "ring" and "shaft" contacts of the miniature phone plug. (The ring is the middle contact visible on the plug; the shaft is the contact nearest the handle.) At the other end of the cable, solder one conductor to each of the switch contacts. (With shielded cable, solder the shield drain wire to the shaft contact on the plug.)

(Note that the "tip" contact in the socket is the data pathway for the automatic clock synchronizing procedure. Don't connect the external remote switch to that contact.)

Once assembled, plug the cable into the **Remote Split** input on the 650. Each time the switch contacts close, the 650 will be split.

**CAUTION!** Do not discharge static electricity into the **Remote Split** input. A static discharge into the input will damage the 650.

## MAINTENANCE & TROUBLESHOOTING

### Firmware Version

To identify the operating firmware version that is in your 650, select **RUN** on the rotary switch, actuate and hold **Split**, and turn the rotary switch to **Lap**. The display will alternately show the firmware version, and a value indicating a correction (with a “**PUSH**” or “**PULL**” direction) applied to the crystal used in your 650 to compensate for manufacturing tolerances.

### Replacing Batteries

The batteries in the Timewise 650 must be replaced once every 5 months. Use four fresh “AA” *alkaline* batteries. The batteries are accessible by opening the 650. To do so, remove the Phillips head screws in the four corners of the front panel. The case can then be pulled off, revealing the battery holder. (A piece of foam that cushions the batteries sometimes sticks to the battery surface - you may have to do a little “wiggling”.)

Check the battery holder contacts for signs of corrosion and carefully clean as required. When re-installing the four screws, take care not to cross-thread them in the case...and don't overtighten them!

### Preventing Problems

Some components within the instrument are very sensitive to static electricity. When you open the 650 to replace the batteries, be very careful. A static discharge to a solder trace on the printed circuit board can damage the instrument. You can damage the 650 with a static discharge that is a thousand times weaker than the energy required to form a spark.

Don't fool yourself about your impunity to static electricity. While riding in a vehicle, a static charge is generated within the entire vehicle as the tires flex against the road. Such charges generally dissipate evenly throughout the vehicle and therefore do not cause a problem. However, fabric used to cover seats can lead to a localized charge on your body. In some cases, just touching the knurled nut on the **Remote Split** input, or the metal wires of a cable connected to that input, can cause a problem.

*If you've experienced a problem with static electricity in your vehicle, Timewise suggests you treat the inside of your vehicle with a static dissipating chemical. Anti-static treatments, often in an aerosol or pump spray bottle, are available from stationary and computer stores.*

### Overheating

The Timewise 650 is designed to operate in the temperature range you generally experience a vehicle. However, on hot summer days with little wind blowing, temperatures in a parked closed vehicle can exceed 160° F. In such a case, the 650 will exceed its maximum operating temperature.

Keep the 650 out of direct sunlight when it's in a closed vehicle. During lunch breaks or rest stops, locate the 650 in a shaded area inside the vehicle. However, don't store the instrument in the glovebox.

---

# MAINTENANCE & TROUBLESHOOTING

---

## Electrical Troubleshooting

If you experience problems with operation of the Timewise 650, here are several areas to investigate before concluding that the instrument is broken.

- ❑ Is the LCD off because you are in the power saving mode? Actuate any toggle switch to exit that mode.
- ❑ Are four “AA” batteries present in the battery holder?
- ❑ Are the batteries in good condition? Replace them every 5 months, regardless of whether or not the clock runs. Battery corrosion can damage the 650. All batteries eventually corrode. A corroded contact can cause an intermittent power disruption.
- ❑ Are the battery contacts clean? Are the battery holder contacts clean?
- ❑ Are the batteries inserted correctly? The holder indicates the correct orientation.
- ❑ Are newly inserted batteries fresh or are they just “unused”? Old batteries can cease to output a voltage, even though they may never have been used.

## Cleaning the 650

Keep the 650 free of as much dirt and grime as possible. Although it is obviously impossible to prevent accumulation of dust and fingerprints, ordinary precautions can protect your 650 from excessive dirt.

Be careful when cleaning the front panel. Although the polycarbonate surface is protected from minor scratches by a protective coating, abrasive grit and certain cleaning chemicals will mar the panel. To clean the panel, use a mild plastic cleaning solution or a very weak solution of dishwashing liquid and water. Do not use chemical solvents, ammonia glass cleaners, bathroom and kitchen cleansers, or any aromatic hydrocarbon based cleaner. Use a soft cloth and wipe accumulated dirt off carefully to prevent scratches.

Never spray a cleaner directly on the 650; rather, spray a cloth and then clean the panel with the damp cloth. If you spray a cleaner directly on the front panel, some of the liquid will enter the switches and cause internal corrosion and eventual failure of the switch mechanism.

## WARNING!

Chemicals used in insect repellents may damage the front panel on the 650. Do not let these chemicals come into contact with the panel, as you can ruin the appearance of the instrument

---

# MAINTENANCE & TROUBLESHOOTING

---

## Oscillator Adjustment

The Timewise 650 uses a quartz crystal oscillator to accurately maintain the time. The oscillator has been corrected to provide a clock accurate to within  $\pm 1$  second after 24 hours.

After a period of time, the crystal and other parts of the circuit age. This is true for all oscillator circuits. The clock will then gain or lose time to a greater amount than the specified accuracy. The oscillator should then be re-adjusted. Although the procedure is simple, the equipment required to make the adjustment is quite specialized.

*Do not attempt to adjust the oscillator unless you have the appropriate test equipment and are experienced at calibrating electronic instrumentation.*

For those of you that qualify, here's the procedure to follow:

1. Open the 650 by removing the Phillips head screws in the four corners. Pull off the case.
2. Remove one of the "AA" batteries from the battery holder. This will disconnect all power from the instrument.
3. Select the **Live/Sync** rotary switch position.
4. While pushing the **Recall** toggle switch "up", re-insert the battery. Wait about one second and then release the **Recall** toggle. The 650 will enter an oscillator adjustment routine. (The clock will not count, and the display will probably be blank.) A 2560 Hz square wave signal will be output on the tip contact of the **Remote Split** jack. Connect this signal to a frequency counter.
5. Locate a small adjustable capacitor on the back of the printed circuit board next to the battery holder. (If the adjustable capacitor is absent, the 650 must be returned to Timewise for adjustment.)

Using a small *non-conductive* flat-blade adjustment tool inserted into the adjustable capacitor, change the output calibration signal to 2560.000 Hz,  $\pm .005$  Hz. (On most 650s, a different frequency is written on an adhesive sticker placed on the side of the buzzer. When such a number is present, adjust the oscillator to that figure instead.)

**IMPORTANT!** Do not use a metal blade screwdriver for this adjustment! The capacitance of your body will unpredictably change the frequency of the oscillator as you make the adjustment.

The capacitor adjustment screw will need to be turned very little. Note that the screw will turn endlessly, cycling through its adjustment range with each revolution. If the oscillator cannot be adjusted to the correct value within one revolution of the adjustment screw, the 650 must be returned to Timewise for repair.

(As a matter of interest, the 650 will be accurate to  $\pm 1$  sec. in 48 hours if the oscillator is set to 2560.000 Hz,  $\pm .015$  Hz.)

6. After making the adjustment, de-select the **Live/Sync** rotary switch position. Normal operation of the clock will resume.



**Restricted  
Datalog Access  
Mode  
(firmware version  
1.006 and newer)**

If you wish to somewhat simplify operation of the 650, the instrument can be operated in a special mode that restricts access to the datalog memory. Restricting access to the datalog can prevent inexperienced checkpoint workers from casually scanning through the datalog and becoming “lost in the data”.

When running in the “restricted datalog access” mode, scanning backwards through the datalog (to review older split data) is only possible when the **Auto Print** rotary switch position is selected. Administrative personnel (e.g., checkpoint captains) can be informed of this simple security override.

To enter the restricted access mode, do the following: display the live clock by actuating the **Recall** switch as necessary. Then turn the rotary switch to the **Select Mode** position. Finally, hold the **Recall** switch up continuously for about 7 seconds. The buzzer will briefly sound, and the “sequence” and “splits ago” numbers will be replaced by the live clock. The 650 will now be operating the restricted datalog access mode.

When operating in the restricted access mode, you can retrieve the live clock following each split, as is usual, using the **Recall** “newer” toggle switch position. Also as is usual, if you execute several splits before recalling the live clock, you can move forward through the split data recalling each split time in sequence, until the live clock is reached.

However, you can no longer scan through the datalog memory searching for previously viewed data. That is, you cannot go backwards in the datalog by using the **Recall** “older” toggle switch position.

In effect, the 650 will function in the classic data recall method of the Timewise 610 and Zeron 88 checkpoint clocks.

When operating in the restricted access mode, the “sequence” and “splits ago” numbers are not shown when the **Recall** switch is actuated. You can, however, actuate the **Print** switch to see the identification numbers for the current data.

Should it become necessary to review older split data, turn the rotary switch to the **Auto Print** position. The **Recall** “older” toggle switch position will then be active, and you can scan backwards through the datalog. After reviewing the data of interest, select any other rotary switch position to return to the restricted access mode. Note that the “sequence” and “splits ago” numbers are shown when **Auto Print** is selected on the rotary switch and the **Recall** switch is actuated.

When you no longer want to operate in the restricted datalog access mode, turn the rotary switch to the **Select Mode** position, display the live clock, and hold the **Recall** switch up continuously for about 7 seconds. The buzzer will briefly sound when the restricted datalog access mode is exited. The “sequence” and “splits ago” numbers will become visible at this time.

## TECHNICAL SPECIFICATIONS

<b>Design</b>	CPU type:	MC68HC705C8A (or C9A) operating @ 307.2 KHz
	Operating memory:	Program: 7584 bytes Data: 304 bytes
	Display:	Extended temperature range, high humidity tolerant, 0.5" tall character, 6 digit LCD
	Multi-split storage: Lap Split storage:	50 memories (first in - first out), with replay 1 (separate from time-of-day splits, with recall)
<b>Displayed Information</b>	Time of Day:	12:00:00(.0) to 11:59:59(.9) or, 12:00.00(0) to 11:59.99(9)
	Lap Split Data:	00.000 to 59.999 (or, 00:00.0 to 59:59.9)
	Log count:	"xx yyy" xx = "split's ago" count from live (range 0 to 50) yyy = split "sequence" being viewed (range 1 to 999)
	<b>Clock Accuracy</b>	± 1 second in 24 hours (but typically 48 hours)
<b>Electrical</b>	Power source:	4 "AA" alkaline batteries
	Power requirements:	4 to 6 VDC; 150 to 250 $\mu$ mamps while running; 100 to 200 $\mu$ mamps during standby; 15 $\mu$ mamps while asleep; 50 mamps max. when the LCD backlight activated
	Expected battery life:	3600 hours (5 months) during normal useage (20% "on" time). Battery life is significantly decreased when the LCD backlighting is operated – activating the backlighting for 5 seconds consumes the equivalent energy used during 1 hour of non-lighted operation.) <i>Optional external power requirements for continuous LCD backlighting: 9 VDC, 40 mamps; or, 12 VDC, 70 mamps</i> <b>WARNING:</b> Do not use the unregulated 13.2 volts that is typical of a fully charged "12 volt" lead acid battery.
<b>Environmental</b>	Storage temperature:	-40°C to 80°C
	Operating temperature:	-15°C to 40°C
	Humidity:	20% to 90%, non-condensing
<b>Physical</b>	Enclosure:	Phenolic
	Front panel:	Scratch protected polycarbonate over aluminum
	Size:	4.025" x 2.925" x 2.3" (including height of switches)
	Weight:	Approximately 11.5 oz. (including batteries)
	Optional coaxial DC input jack for continuous backlighting:	5.0mm OD, 2.1mm ID; (+ on pin, - on sleeve)